



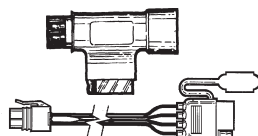

2015 APPLICATION GUIDE

Litemate[®] Vehicle-to-Trailer Wiring System

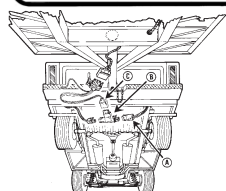

1. Locate & unplug Factory Connector. (Usually behind tail lights.)
2. Plug Litemate Vehicle Connector into factory plug.
3. Ground white wire to frame.
4. Plug Litemate Trailer Connector into trailer's wiring system.

CARS / VANS / TRUCKS NOT LISTED ON FOLLOWING GUIDE	(Hard Wire)	PART #	CLAM #
Vehicles with RED rear turn signals or with a common bulb for turn signals & brake lights.		6588P	6588PT
Vehicles with AMBER rear turn signals or with separate bulbs for turn signals & brake lights.		6589P	6589PT

ACURA	DATE	PART #	CLAM #	DODGE cont.	DATE	PART #	CLAM #
CL	1997-2003	6756P	6756PT	Caravan & Grand Caravan	2001-2003	6984P	6984PT
Integra	1994-2001	6756P	6756PT		2004-2007	6988P	6988PT
MDX	2001-2006	6756P	6756PT	Dakota Pickup	1987-1994	6986P	6986PT
RL / TL	1996-2003	6756P	6756PT		1995-2003	6982P	6982PT
SLX	1996-2000	6754P	6754PT		2004-2011	6987P	6987PT
AUDI				(Factory 7-Way)	2000-2010	6782P	6782PT
Q3 / Q5 (Factory 7-Way)	2009-2015	**6780 or 6781		Durango	1998-2003	6983P	6983PT
Q7 (Factory 7-Way)	2007-2015	**6780 or 6781			2004-2009	6989P	6989PT
BUICK				(Factory 7-Way)	2000-early 07	6782P	6782PT
Enclave (Factory 7-Way)	2008-2015	**6780 or 6781		(Factory 7-Way)	late 2007-15	**6780 or 6781	
Rainier	2004-2007	**6780 or 6781		Journey (Factory 7-Way)	2009-2010	**6780 or 6781	
CADILLAC				Nitro (Factory 7-Way)	2007-2009	**6780 or 6781	
Escalade	1999-2000	6762P	6762PT	Ram Pickup All Sizes	1987-1994	6986P	6986PT
	2002-2006	**6780 or 6781			1995-2001	6982P	6982PT
Escalade/EXT/ESV	2007-2015	**6780 or 6781		(Cab & Chassis only)	1995-2002	6986P	6986PT
CHEVROLET				Ram Pickup 1500	2002-2006	6985P	6985PT
Astro (Hard Wire)	1995-2005	6764P	6764PT		2007-2009	6987P	6987PT
Avalanche	2002-2013	**6780 or 6781		(Factory 7-Way)	2000-2009	6782P	6782PT
Blazer (Full Size)	1973-1984	6760P	6760PT	(Factory 7-Way)	2010-2015	**6780 or 6781	
	1985-1991	6761P	6761PT	Ram Pickup 2500/3500	2002	6982P	6982PT
	1992-1994	6762P	6762PT	(w/Tow Pkg)	2003-2006	6985P	6985PT
(Hard Wire)	1995-2004	6764P	6764PT		2007-2009	6987P	6987PT
Blazer S-10 (2-door)	1984-1991	6763P	6763PT	(Factory 7-Way)	2000-2009	6782P	6782PT
	1992-1994	6765P	6765PT	(Factory 7-Way)	2010-2015	**6780 or 6781	
Colorado	2004-2012	6772P	6772PT	Ram Charger / Trailduster	1988-1993	6986P	6986PT
(Factory 7-Way)	2008-2015	**6780 or 6781		Ram Promaster (Factory)	2014-2015	**6780 or 6781	
Equinox	2010-2015	6774P	6774PT	Ram Van	1993-1998	6981P	6981PT
Express Van	1996-1999	6768P	6768PT		2001-2003	6782P	6782PT
	2000-2002	6771P	6771PT	Tradesman Van	2014-2015	6782P	6782PT
	2003-2015	6773P	6773PT	Sprinter (Factory 7-Way)	2004-2009	6782P	6782PT
(Factory 7-Way)	2003-2015	**6780 or 6781		FORD			
Pickups (Full Size)	1968-1984	6760P	6760PT	Aerostar	1997	6883P	6883PT
	1985-1987	6761P	6761PT	Bronco	1980-1986	6873P	6873PT
(Old Body Style)	1998-2000	6762P	6762PT		1987-1988	6874P	6874PT
Silverado 1500	1999-2002	6769P	6769PT		1989-1991	6875P	6875PT
	2003-2013	**6780 or 6781			1992-1996	6865P	6865PT
2500/3500 (New Body Style)	1999-2015	**6780 or 6781		Bronco II	1987-1991	6876P	6876PT
S-10 Pickup	1985-1997	6761P	6761PT	Crown Victoria / LTD	1992-1997	6866P	6866PT
	1998-2004	6767P	6767PT	Escape (w/o Tow Pkg)	2001-2004	6868P	6868PT
Suburban	1973-1984	6760P	6760PT	(w/Tow Pkg)	2013-2015	**6780 or 6781	
	1985-1991	6761P	6761PT	Escort Sedan	1997-2001	6883P	6883PT
	1992-1999	6762P	6762PT	Excursion	2000-2003	6883P	6883PT
	2000-2015	**6780 or 6781		(w/Tow Pkg)	2000-2005	**6780 or 6781	
Tahoe	1995-1999	6762P	6762PT	Expedition (w/Tow Pkg)	1997-2003	6882P	6882PT
	2000-2015	**6780 or 6781		(w/o Tow Pkg)	1997-2003	6883P	6883PT
Tracker	1998-2004	6782P	6782PT	(Factory 7-Way)	1999-2014	**6780 or 6781	
Trailblazer	2002-2009	**6780 or 6781		(Factory 4-Flat)	2000-2002	6886P	6886PT
Traverse	2010-2015	**6780 or 6781		Explorer	1991-1994	6878P	6878PT
Van (Except Express)	1987-1996	6766P	6766PT	(With Converter)	1995-2000	6868P	6868PT
CHRYSLER				(w/Tow Pkg)	1995-2001	6881P	6881PT
Aspen	2007-2009	6989P	6989PT		1996-1997	6880P	6880PT
(Factory 7-Way)	early 2007	6782P	6782PT	(w/o Tow Pkg)	2001-2003	6883P	6883PT
(Factory 7-Way)	late 2007-09	**6780 or 6781			2002-2005	6863P	6863PT
Pacifica (Factory 7-Way)	2003-2008	6782P	6782PT		2006-2010	6889P	6889PT
Town & Country	1991-1995	6987P	6987PT	(Factory 7-Way)	2002-2015	**6780 or 6781	
	1996-2000	6983P	6983PT	Explorer Sport Trac (Factory)	2007-10	**6780 or 6781	
	2001-2003	6984P	6984PT	F-Series Pickup	1973-1979	6872P	6872PT
	2004-2007	6988P	6988PT		1980-1986	6873P	6873PT
DODGE					1987-1996	6870P	6870PT
Caravan & Grand Caravan	1991-1995	6987P	6987PT				
	1996-2000	6983P	6983PT				

**Add P - Bagged Program / Add PT - Clam Shell Program



2015 APPLICATION GUIDE

FORD cont.				HONDA cont.			
	DATE	PART #	CLAM #		DATE	PART #	CLAM #
F-150 (Mfg 1/96 - 10/96)	1997	6882P	6882PT	Odyssey	1995-2004	6756P	6756PT
(Mfg. 11/96-04)	1997-2004	6884P	6884PT	Passport	1994-1997	6757P	6757PT
(New Body Style)	2004	6887P	6887PT		1998-2004	6743P	6743PT
(Factory 7-Way)	2008-2015	**6780 or 6781		Pilot	2003-2008	6756P	6756PT
F-250 (Light Duty)	1997	6882P	6882PT	Prelude	2001-2002	6756P	6756PT
	1997-2001	6884P	6884PT	Ridgeline	2006-2014	6738P	6738PT
F-250 (Heavy Duty) F-350	1987-1997	6870P	6870PT	HUMMER			
	1999-2001	6885P	6885PT	H2 / H2 SUT	2003-2009	**6780 or 6781	
	2002-2004	6862P	6862PT	H3 / H3T	2006-2009	**6780 or 6781	
(Factory 7-Way)	1999-2015	**6780 or 6781		INFINITI			
F-250 & F-350	2009-2015	6891P	6891PT	QX4	1996-2003	6753P	6753PT
Flex	2009-2015	6888P	6888PT	QX56 (w/Tow Pkg)	2004-2015	**6780 or 6781	
(Factory 7-Way)	2009-2015	**6780 or 6781		ISUZU			
Focus Wagon	2000-2003	6883P	6883PT	Ascender	2003	6756P	6756PT
Mustang (Except Cobra)	1994-2004	6866P	6866PT		2004-2008	**6780 or 6781	
Ranger Pickup	1986-1992	6871P	6871PT	Amigo	1998-2001	6743P	6743PT
	1993-1999	6879P	6879PT	Axiom	2002-2004	6743P	6743PT
(With Tow Pkg)	1998-1999	6881P	6881PT	Cyclone	1991-1992	6761P	6761PT
(w/o STX)	2000-2011	6883P	6883PT	Hombre	1996-1997	6761P	6761PT
Taurus Sedan	1992-1995	6867P	6867PT		1998-2001	6767P	6767PT
	1996-1999	6864P	6864PT	I-280	2006	6772P	6772PT
Econoline Van	1992-1994	6868P	6868PT	I-290	2007-08	6772P	6772PT
Transit T-150, T-250, T-350	2015	**6780 or 6781		I-350	2006	6772P	6772PT
	1995-2003	6883P	6883PT	I-370	2007-08	6772P	6772PT
	2009-2013	6890P	6890PT	Oasis	1996-1998	6756P	6756PT
E-150 & E-250 Van	2004-2014	**6780 or 6781		Rodeo	1992-1997	6757P	6757PT
Windstar	1995-1998	6869P	6869PT		1998-2004	6743P	6743PT
ZX2	1998-2003	6883P	6883PT	Rodeo Sport	1996-2003	6743P	6743PT
				Trooper	1992-2002	6754P	6754PT
GMC				JEEP			
Arcadia (Factory 7-Way)	2007-2015	**6780 or 6781		Cherokee	1976-1982	6949P	6949PT
Canyon (w/o Tow Pkg)	2004-2007	6772P	6772PT		1991-1996	6948P	6948PT
(Factory 7-Way)	2008-2015	**6780 or 6781			1997-2001	6950P	6950PT
Cyclone	1991-1992	6761P	6761PT	(Factory 7-Way)	2014-2015	**6780 or 6781	
Denali	1999-2000	6762P	6762PT	Commander (Factory 7-Way)	2006-2010	6782P	6782PT
	2001-2014	**6780 or 6781		Grand Cherokee	1994-1998	6946P	6946PT
Envoy (Hard Wire)	1999-2001	6764P	6764PT	(w/Tow Pkg)	1995-1998	6947P	6947PT
	2002-2009	**6780 or 6781			1999-2004	6953P	6953PT
Jimmy (Full Size)	1973-1984	6760P	6760PT		2007-2011	6955P	6955PT
	1985-1991	6761P	6761PT	(Factory 7-Way)	2000-2010	6782P	6782PT
	1992-1994	6762P	6762PT	(Factory 7-Way)	2011-2015	**6780 or 6781	
(Hard Wire)	1995-2002	6764P	6764PT	Liberty (Factory 7-Way)	2004-2007	6782P	6782PT
Jimmy S-15 (2-door)	1984-1991	6763P	6763PT	(Factory 7-Way)	2008-2010	**6780 or 6781	
	1992-1994	6765P	6765PT	Wrangler / Renegade / YJ	1991-1997	6951P	6951PT
Pickup (Full Size)	1968-1984	6760P	6760PT		1998-2004	6952P	6952PT
	1985-1987	6761P	6761PT		2005-2006	6954P	6954PT
	1988-1998	6762P	6762PT		2007-2015	6956P	6956PT
(Old Body Style - Classic)	1999-2000	6762P	6762PT	(Factory 7-Way)	2004-2015	6782P	6782PT
Sierra 1500 (New Body Style)	1999-2002	6769P	6769PT	KIA / LAND ROVER / LEXUS			
2500/3500 (New Body Style)	1999-2015	**6780 or 6781		Borrego	2009	**6780 or 6781	
Safari (Hard Wire)	1995-2005	6764P	6764PT	LR4 (w/Tow Pkg)	2013-2014	**6780 or 6781	
Sonoma / S-15 Pickup	1985-1997	6761P	6761PT	Range Rover (w/Tow Pkg)	2013-2014	**6780 or 6781	
	1998-2004	6767P	6767PT	LX 450	1996-1998	6749P	6749PT
Savana Van (Full Size)	1996-1999	6768P	6768PT	LINCOLN			
	2000-2002	6771P	6771PT	Aviator	1998-2004	6883P	6883PT
	2003-2015	6773P	6773PT		2003-2005	6863P	6863PT
(w/Tow Pkg)	2009-2015	**6780 or 6781			2006	6889P	6889PT
Terrain	2010-2015	6774P	6774PT	(Factory 7-Way)	2003-2006	**6780 or 6781	
Vandura (Full Size)	1987-1996	6766P	6766PT	Mark LT	2006-2008	**6780 or 6781	
Yukon	1992-1999	6762P	6762PT	MKT (w/Tow Pkg)	2009-2014	**6780 or 6781	
Yukon / Yukon XL	2000-2015	**6780 or 6781		Navigator	1997-1999	6882P	6882PT
				(w/Tow Pkg)	2000-2002	6886P	6886PT
HONDA					1999-2015	**6780 or 6781	
Accord	1994-2002	6756P	6756PT	Town Car	1998-2004	6866P	6866PT
Accord (Wagon)	1994-1997	6756P	6756PT	MAZDA			
CRV	1997-2006	6756P	6756PT	Navajo	1991-1994	6878P	6878PT
Del Sol	1993-1997	6756P	6756PT	Pickup B-Series	1994-2009	6879P	6879PT
Element	2003-2006	6756P	6756PT	(w/Tow Pkg)	1998-1999	6881P	6881PT
	2007-2012	6754P	6754PT	Tribute (w/o Tow Pkg)	2001-2003	6868P	6868PT

**Add P - Bagged Program / Add PT - Clam Shell Program



2015 APPLICATION GUIDE

MERCEDES BENZ	DATE	PART #	CLAM #
GL Class (Factory 7-Way)	2007-2010	6782P	6782PT
M Class (w/Tow Pkg)	1998-2014	**6780 or 6781	
MERCURY			
Grand Marquis	1992-1997	6866P	6866PT
Mountaineer	1996-1997	6880P	6880PT
(w/o Tow Pkg)	1997-2000	6868P	6868PT
(w/Tow Pkg)	1996-2001	6881P	6881PT
	2002-2005	6863P	6863PT
	2006-2010	6889P	6889PT
(Factory 7-Way)	2002-2010	**6780 or 6781	
Sable Sedan	1996-1999	6864P	6864PT
Tracer	1997-1999	6883P	6883PT
MITSUBISHI			
Raider	2006-2008	6987P	6987PT
Raider (Factory 7-Way)	2006-2008	6782P	6782PT
NISSAN			
Altima	1997-2001	6753P	6753PT
Armada	2004-2015	**6780 or 6781	
Frontier Pickup	1998-2004	6746P	6746PT
	2005-2015	6736P	6736PT
(w/Tow Pkg)	2005-2011	6752P	6752PT
Pathfinder	1996-2004	6753P	6753PT
(w/Tow Pkg)	2005-2009	6752P	6752PT
(w/Tow Pkg)	2013-2015	**6780 or 6781	
Pickup	1986-1997	6755P	6755PT
Titan	2004-2015	**6780 or 6781	
Xterra (w/Tow Pkg)	2005-2015	6752P	6752PT
OLDSMOBILE / PLYMOUTH / PORSCHE			
Bravada (Hard Wire)	1996-2001	6764P	6764PT
	2002-2004	**6780 or 6781	
Cayenne	2013-2014	**6780 or 6781	
Voyager / Grand Voyager	1991-1995	6987P	6987PT
	1996-2000	6983P	6983PT
	2001-2003	6984P	6984PT
SAAB / SATURN			
9-7X	2005-2010	**6780 or 6781	
Outlook (w/Tow Pkg)	2007-2010	**6780 or 6781	
SUBARU			
B9 Tribeca	2006-2014	6750P	6750PT
Forester	1998-2008	6750P	6750PT
	2009-2015	6734P	6734PT
Impreza Sedan	2002-2007	6750P	6750PT
	2008-2015	6734P	6734PT
Legacy	2003-2008	6750P	6750PT
Outback	1996-2008	6750P	6750PT
	2010-2015	6734P	6734PT
SUZUKI			
Equator (w/Tow Pkg)	2009-2012	6736P	6736PT
(Factory 4-Flat)	2009-2012	6752P	6752PT
Vitara / Grand Vitara	1999-2005	6782P	6782PT
XL-7	2001-2005	6782P	6782PT
TOYOTA			
Highlander (w/Tow Pkg)	2008-2015	6740P	6740PT
	2008-2015	6741P	6741PT
Land Cruiser	1991-1999	6749P	6749PT
Pickup (Except T-100)	1984-1995	6744P	6744PT
RAV4	1996-2000	6747P	6747PT
	2001-2005	6737P	6737PT
4-Runner	1996-2002	6748P	6748PT
Sequoia (w/Tow Pkg)	2011-2014	**6780 or 6781	
Tacoma	1995-2004	6744P	6744PT
	2005-2015	6759P	6759PT
	1993-1998	6759P	6759PT
T-100 Pickup	1999-2000	6745P	6745PT
	2001-2002	6742P	6742PT
(w/Tow Pkg)	2003-2006	6783P	6783PT
(w/Tow Pkg)	2007-2013	6784P	6784PT
(Factory 7-Way)	2014-2015	**6780 or 6781	

**Add P - Bagged Program **Add PT - Clam Shell Program

MULTI-TOW

New or Retrofit Factory 7-Way

6780P / 6780PT

7-Way RV Blade & 4-Way Flat



6781P / 6781PT

6-Way Round & 4-Way Flat



CHEVY / GMC / OLDS / CADILLAC / HUMMER / BUICK / ISUZU / LAND ROVER / LEXUS / SAAB / SATURN / TOYOTA

1500 Pickups	2003-15	Enclave	2008-15	Rainier	2004-07
2500 / 3500 Pickups	1999-15	Escalade/Ext/Esv	2002-15	Range Rover	2013-14
9-7X	2005-10	Express Van	2003-15	Savana Van	2009-15
Acadia	2007-15	Envoy	2002-09	Sequoia	2010-14
Ascender	2004-08	H2 / H2 SUT	2003-09	Sierra	1999-15
Avalanche	2002-13	H3	2006-09	Suburban	2000-15
Bravada	2002-04	H3T	2009	Tahoe	2000-15
Canyon	2008-15	LR4	2013-14	Trailblazer	2002-09
Colorado	2008-15	LX 570	2008-13	Traverse	2010-15
Denali	2001-14	Outlook	2007-10	Tundra	2014-15
				Yukon / XL	2000-15

FORD / LINCOLN / MERCURY / NISSAN / INFINITI / KIA / AUDI

Armada	2004-15	Excursion	2000-05	Navigator	1999-15
Aviator	2003-06	Explorer	2002-15	Pathfinder	2013-15
Borrego	2009	Explorer Sport Trac	2007-10	Q3 / Q5	2009-15
F-150 Series	2008-15	Flex	2009-15	Q7	2007-15
F-250 & F-350	2008-15	Mark LT	2006-08	QX-56	2004-15
Escape	2013-15	MKT	2009-14	Titan	2004-15
Expedition	1999-14	Mountaineer	2002-10	Transit	2015
				E-Vans	2004-14

DODGE / CHRYSLER / JEEP / MERCEDES / PORSCHE

Aspen	2007-09	Grand Cherokee	2011-15	Nitro	2007-09
Cayenne	2013-14	Journey	2009-10	Ram 1500	2010-15
Cherokee	2014-15	Liberty	2008-10	2500/3500	2010-15
Durango	2007-15	M Class	1998-14	Promaster	2014-15

DODGE / CHRYSLER / JEEP / MERCEDES / MITSUBISHI

Aspen	Early 07	Tracker	1995-05
Commander	2006-10	Vitara	1999-05
Dakota	2000-10	Wrangler	2004-14
Durango	2000-Early 07	XL-7	2001-05

6782P / 6782PT
7-Way RV Blade & 4-Way Flat



CHEVY / GMC

1500 Pickups	2003-15	Envoy	2002-09
2500 / 3500 Pickups	1999-15	H2 / H2 SUT	2003-09
9-7X	2005-10	H3T	2009
Acadia	2007-15	Outlook	2007-10
Ascender	2004-08	Rainier	2004-07
Avalanche	2002-13	Savana Van	2009-15
Bravada	2002-04	Sierra	1999-15
Canyon	2008-15	Suburban	2000-15
Colorado	2008-15	Tahoe	2000-15
Denali	2001-14	Trailblazer	2002-09
Enclave	2008-15	Traverse	2010-15
Escalade/Ext/Esv	2002-15	Tundra	2014-15
Express Van	2003-15	Yukon / XL	2000-15

6785P / 6785PT
Twist Mount
7-Way RV Blade
& 4-Way Flat



TOYOTA

6783P / 6783PT

7-Way RV Blade & 4-Way Flat

Tundra (w/Tow Pkg) 2003-06

6784P / 6784PT

7-Way RV Blade & 4-Way Flat

Tundra (w/Tow Pkg) 2007-14





TRAILER CONVERTERS & ADAPTERS

#6531P (#6531PT)
General Purpose Utility Converter for Vehicles with Amber Turn Signals. Light Duty Usage. (60" Wires)

#6551P (#6551PT)
Converter with Circuit Guardian for vehicles with amber turn signals. Protects sensitive on-board computers. (22" Power Feed Wire) Includes Extension #6590P.

#6552P (#6552PT)
Converter with Smart Switch for vehicles with amber turn signals. Protects from self destruction caused by shorts. (64" Long) Includes Extension #6596P.

#6573P (#6573PT)
7-Way RV Blade to Both 6-Way Round Pin And a 4-Way Flat. Universal - Center Pin can be switched Auxiliary or Battery.

#6574P (#6574PT)
Adapter with a 7-Way RV Blade Socket And a 4-Way Flat Female with a 4-Way Flat Male on end.

#6585P (#6585PT)
7-Way RV Blade Female Socket With 6-Way Plin Male Plug

#6586P (#6586PT)
7-Way RV Blade Plug to 7-Way Round Socket Flexible Wires Provide Extra Reach.

#6592P (#6592PT)
6-Way Female Socket with 4-Way Flat Male. For Trailers with 6-Way Round & Vehicle with 4-Way Flat. (4' Long)

#6593P (#6593PT)
7-Way Female Socket with 4-Way Flat Male. For Trailers with 7-Way Round RV Blade & Vehicle with 4-Way Flat. (4' Long)



#6591P (#6591PT)
6-Way Round Pin Type Male Plug with 4-Way Flat Female. (8" Long)

#6594P (#6594PT)
7-Way RV Blade Male Plug with 6-Way Round Pin Female Socket. Universal - Center Pin can be switched Auxiliary or Battery.

#6597P (#6597PT)
7-Way RV Blade Male Plug with 4-Way Flat Female.

#6598P (#6598PT)
7-Way Round Pin Male Plug with 4-Way Flat Female.

#6599P (#6599PT)
7-Way RV Blade Male Plug with 5-Way Flat Female.

#6570P (#6570PT)
4-Way Round Male Plug with 4-Way Flat Female.

#6590P (#6590PT)
4-Way Flat Extension for use with 4-Way Flat Connector. (3' long).

#6595P (#6595PT)
4-Way Male Flat Replacement Connector. (4' Long)

#6596P (#6596PT)
4-Way Extension (4' Long) Use between Vehicle Connector & #6593P, or between #6590P & Trailer.

#6572P (#6572PT)
4-Way Flat to 5-Way Flat. Adapts Vehicles to Trailers with Surge Brakes or 5-Way Flat



ELECTRONIC BRAKE CONTROLS & ADAPTERS

For Quick Brake Control Installation When Vehicle Connector Is Present

#6510PT LED Light Display

LED Changes Intensities of Orange/ as Power Setting is Increased
Protects Vehicle from Trailer Brake Shorts
Red LED Indicates Short Circuit



#6511PT

Digital Light Display
Digital Readout Numerical 5 to 99%
Set Exact Percent of Power Needed
Protects from Brake Wire Shorts
AND Trailer Brake Light Shorts
Error Codes Identify Shorts



#6517PT DODGE
(with tow package)

Ram Pickup 1995-09
Dakota 1997-11
Durango 1998-09
Aspen 2007-09

#6519PT FORD
F-250/F-350 Pickup 2005-07
F-450/F-550 Pickup 2005-07

#6521PT NISSAN
Armada 2004-13
Titan 2004-13
Frontier 2004-13
Pathfinder 2004-13
Xterra 2004-13
QX-56 2004-15
NV Van 2012-14

#6516PT FORD

Bronco	1994-96
F-150 Pickup	1994-08
F-250/350 Pickup	1994-04
F-53	2000-14
Expedition	1997-12
Excursion	2000-05
Explorer	2000-13
Flex	2009-11
Mountaineer	2002-10
Van (Full Size)	1994-08
Windstar	1995-03
Navigator	1998-12
LR3	2005-10
LR4	2010-11
Range Rover	2005-13
Lincoln Avitar	2013-14
Lincoln Mark LT	2007-08
Lincoln MKT	2010-11

#6524PT FORD

F-250 350 450 550	2008-15
E-150 250 350	2009-13
E-350 450 RV	2009-11
Expedition	2013
Lincoln Navigator	2013-14

#6518PT

CHEV / GMC / CADILLAC	
Avalanche	2002-06
Silverado (Classic 07)	1999-07
Sierra (Classic 07)	1999-07
Suburban	2000-06
Tahoe	2000-06
Yukon	2000-06
Denali	1999-06
Escalade	2007-13
H2 Hummer	2003-07
H2 SUT Hummer	2003-07

#6522PT DODGE
Ram Pickup 2010-12

#6523PT FORD
F-150 Pickup 2009-14
Flex 2012-14
Lincoln MKT 2012-13

#6525PT

CHEV / GMC / BUICK / SATURN	
Enclave	2008-15
Traverse	2009-14
Acadia	2007-14
Outlook	2007-10