

Trailer Connector Kits



#0733P (#0733PT)
 4-Way 5' Wiring Kit
 Female 48" Lead Wire - Male 12"
 Polarized Plug - Color Coded Wire
 Includes 3 Splice Connectors.



#0735P (#0735PT)
 4-Way 24' Trailer Wiring Kit
 Molded Plastic Polarized Plugs
 Color Coded Wire
 Female - 3 4' Leads & 1 18" Lead (ground)
 Male - 3 20' Leads & 1 18" Lead (ground)
 Includes 6 Splice Connectors

4-POLE CONNECTOR



#0740P (#0740PT)
 Die Cast Chrome Plated Metal
 4-Pole Male & Female Connectors
 Mounting Bracket & Hardware
 18 ga Color Coded Wire
 3 Splice Connectors

6-POLE CONNECTOR




#0742P (#0742PT)
 RV Replacement Kit
 Die Cast Chrome Plated Metal Plug
 Molded Plastic Socket & Boot
 6-Pole Male & Female Connectors
 Mounting Bracket & Hardware
 18 ga Color Coded Wire
 5 Splice Connectors

Litemate® Electronic Brake Controls


For 2, 4 and 6 Brake Systems



#6510PT
 LED Light Display
 LED Changes from Green to Yellow as Power Setting is Increased
 Protects Vehicle from Trailer Brake Shorts
 Red LED Indicates Short Circuit

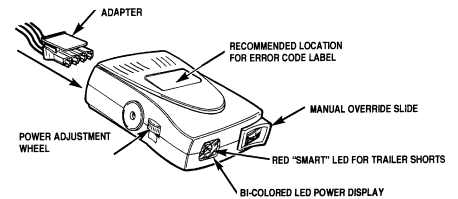

#6511PT
 Digital Light Display
 Digital Readout, Numerical from 5 to 99%
 Set Exact Percentage of Power Needed
 Protects from Trailer Brake Wire Shorts AND Brake Light Shorts
 Error Codes Indicate Short and Identifies Type of Short

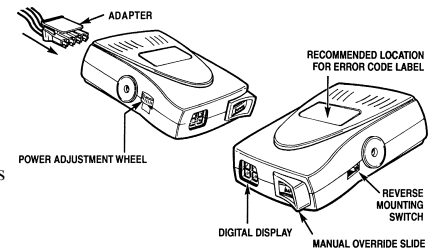

Litemate® Electronic Brake Control Adapters



Make Electronic Brake Control Installation Easy With Adapters!!

- Locate Vehicle Connector (Under Dash)

- Plug in Correct Adapter

- Plug Adapter into Brake Control



#6516PT
 FORD ADAPTER
 F-150 Pickup 1994-08
 F-250/350 Pickup 1994-06
 Expedition 1997-08
 Excursion 2002-05
 Explorer 2002-08
 Mountaineer 2004
 Van (Full Size) 2003-08
 Windstar 1995-03



#6517PT
 DODGE ADAPTER
 (with tow package)
 Ram Pickup 1997-08
 Dakota 1997, 2004-06
 Durango 1998-08



#6518PT
 CHEV / GMC / CADILLAC
 (with tow package)
 Avalanche 2002-06
 Silverado 1999-06
 Sierra 1999-06
 Suburban 2000-06
 Tahoe 2000-06
 Yukon 2000-06
 Denali 2000-06
 Escalade 2000-06
 H2 Hummer 2003-06



#6519PT
 FORD ADAPTER
 F-250-F-350 Pickup 2005-08



#6521PT
 NISSAN ADAPTER
 Armada 2004-08
 Titan 2004-08
 Frontier 2006-08
 Pathfinder 2006-08
 Xterra 2006-08